




Website: WWW.LSSProducts.com
The catalog of products for the visually impaired and hard of hearing
Customer Service: 800-468-4789 Monday–Friday 9am-5pm Eastern Time
2012

LS&S LLC Model number 6682B

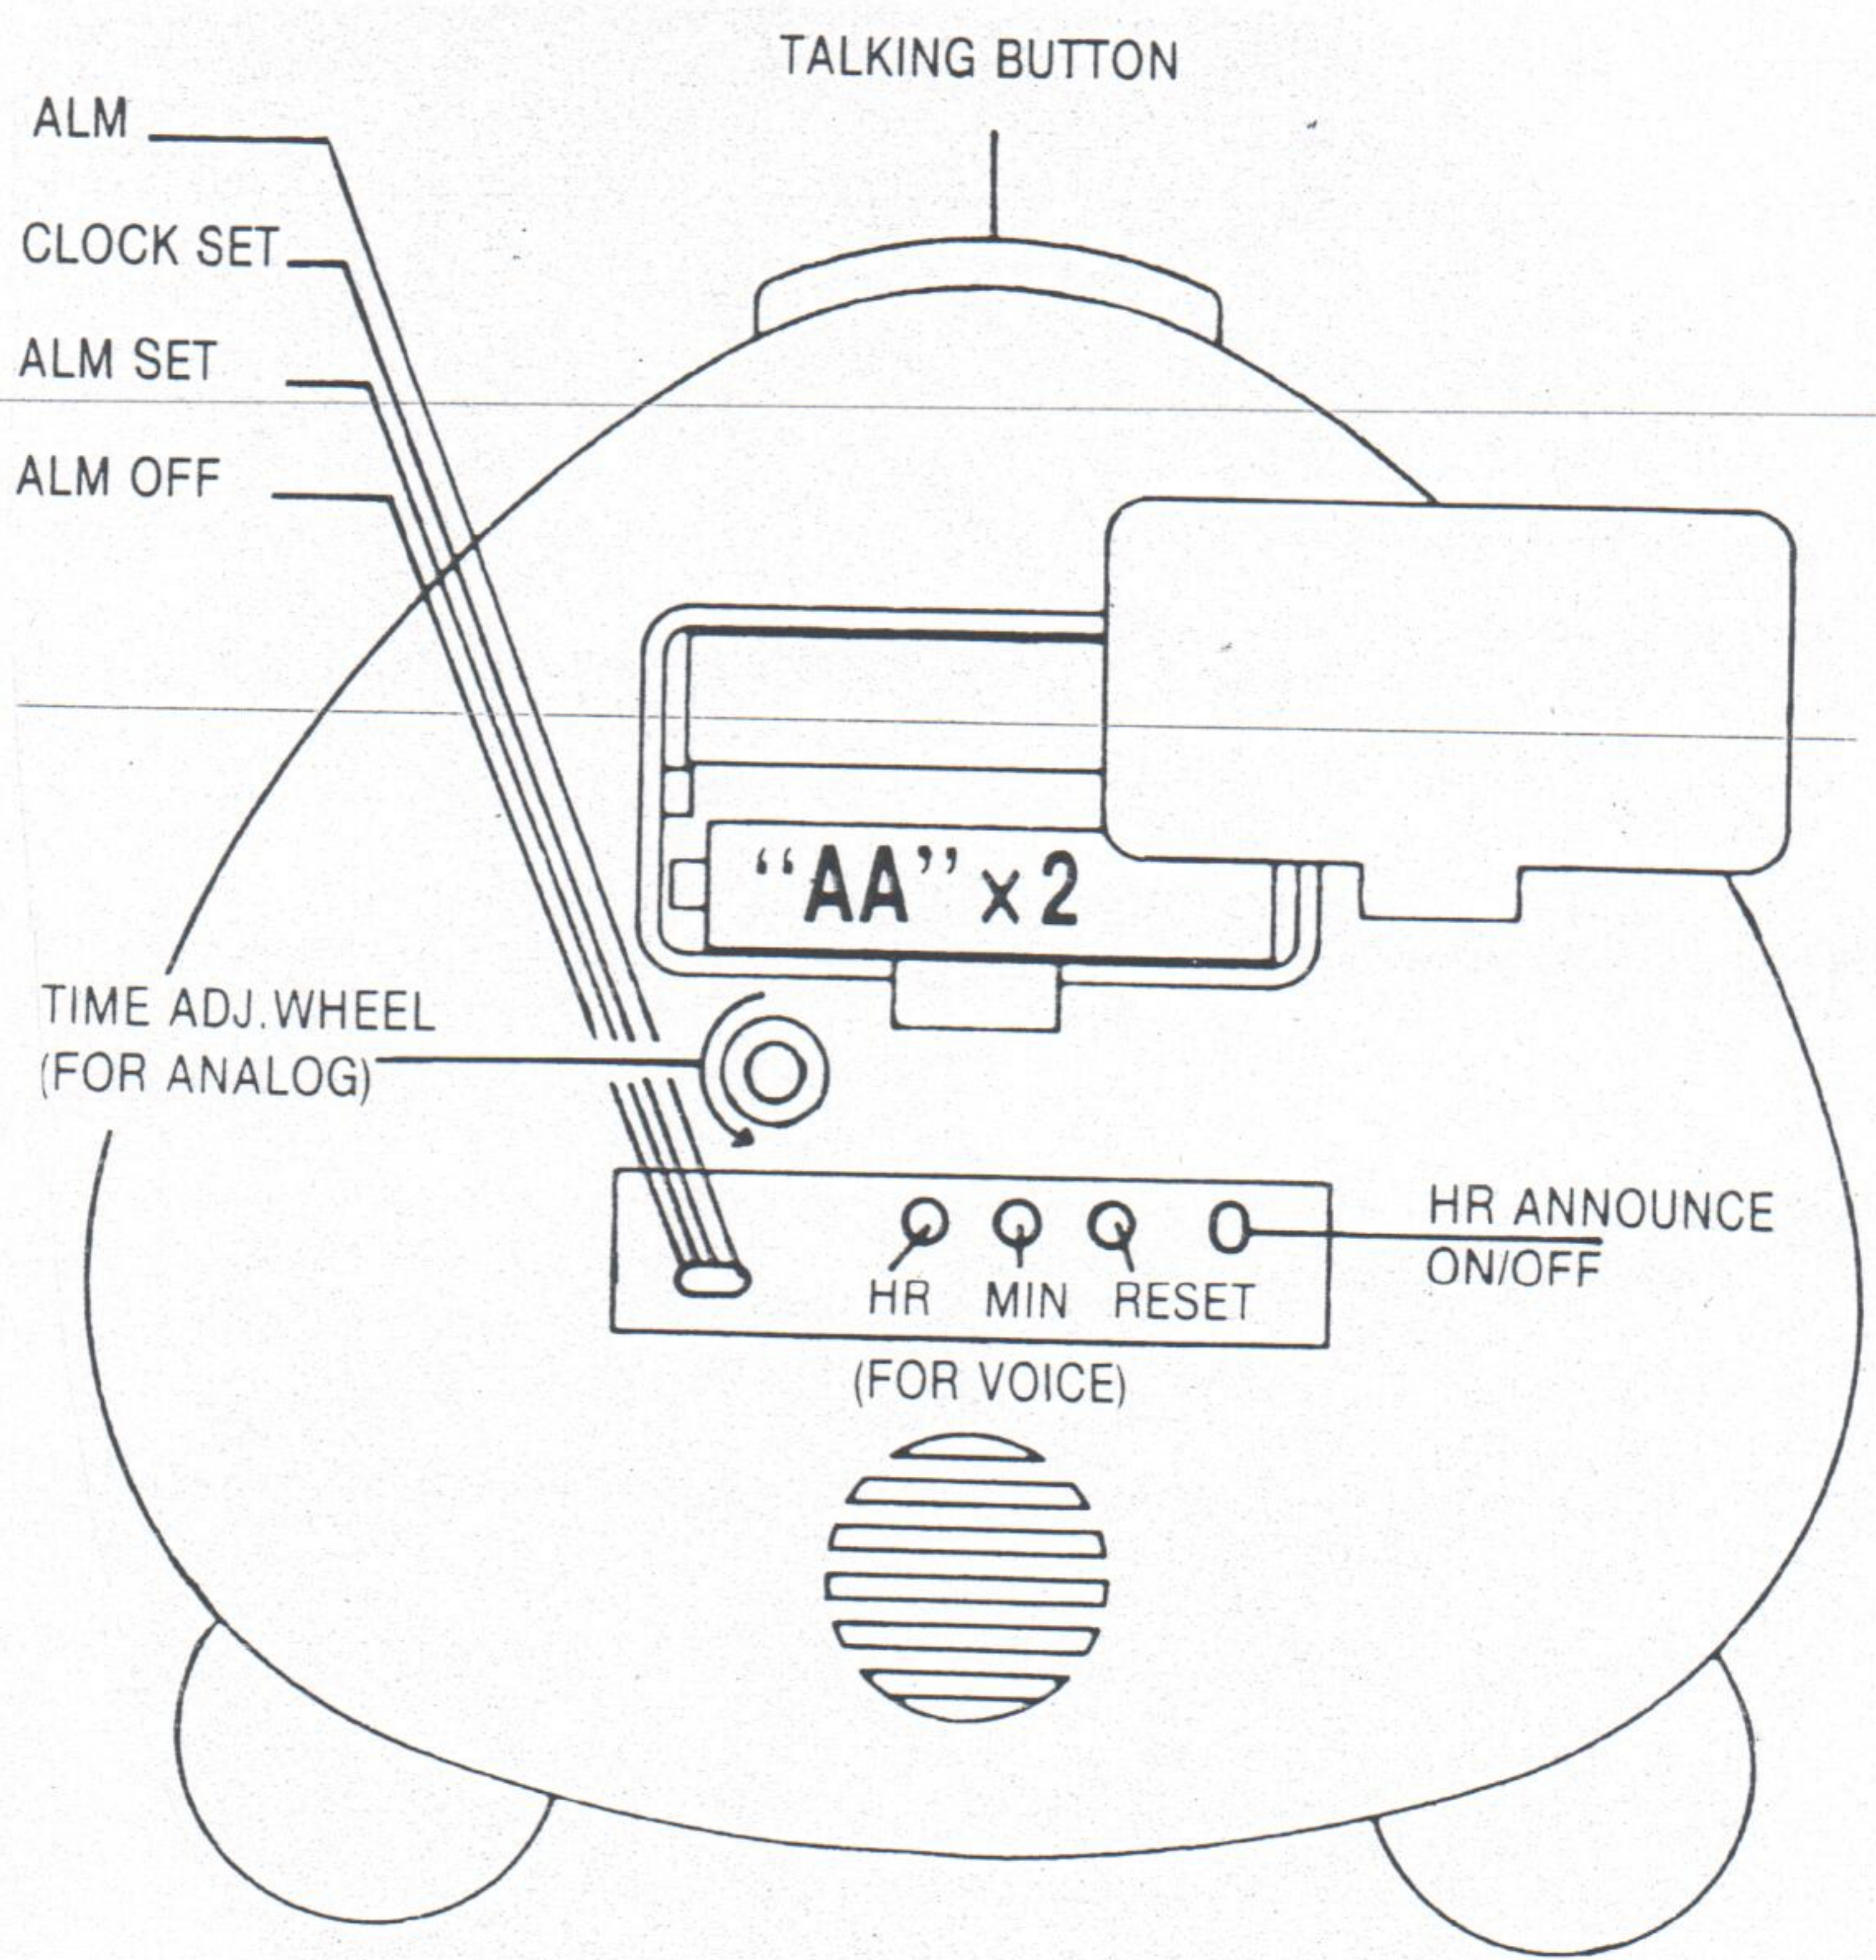

Please note:
Hourly announce will not work and talking time will not keep proper time if clock is kept in ALM SET or CLOCK SET mode. Customer should make sure far left switch is at ALM off or ALM position for proper talking clock functionality.



Website: WWW.LSSProducts.com

The catalog of products for the visually impaired and hard of hearing

Customer Service: 800-468-4789 Monday-Friday 9am-5pm Eastern Time

HOW IT WORKS

2012

TAP THE "TALKING BUTTON" FOR TIME ANNOUNCEMENT.

TO INSERT BATTERIES AND START THE TALKING ANALOG CLOCK.

- * REMOVE THE BATTERY HATCH FROM THE BACK OF THE ANALOG CLOCK AND INSERT TWO (2) "AA" BATTERIES (NOT INCLUDED) FOLLOWING THE DIAGRAM IN THE BATTERY COMPARTMENT SHOWING THE BATTERY POLARITY. REPLACE THE HATCH.

TO SET THE TIME

- * TURN THE "TIME ADJ. WHEEL" RIGHT OR LEFT TO SET THE CURRENT TIME.
- * SHIFT THE FUNCTION SWITCH TO "CLOCK SET" POSITION, PRESS THE "HR"/"MIN" BUTTONS AND FOLLOW THE VOICE INDICATOR IN THE MEANTIME CONTINUOUSLY, UNTIL THE SAME TIME BE ANNOUNCED AS THE ANALOG PART SHOWN.
- * SHIFT THE FUNCTION SWITCH TO "ALM OR "ALM OFF"

TO SET ALARM TIME

- * SHIFT THE FUNCTION SWITCH TO "ALM SET" POSITION.
- * SET THE DESIRED ALARM TIME IN THE SAME WAY AS FOR SETTING THE VOICE TIME.
- * SHIFT THE FUNCTION SWITCH TO "ALM" POSITION.
(THE ALARM WILL SOUND AT THE TIME SET AND WILL LAST FOR ONE MINUTE IF THERE IS NO INTERRUPTION.)
- * STOP THE ALARM SOUND BY TAPPING THE "TALKING BUTTON" (THE SOUND WILL STOP AFTER ONE TIME'S REPORTING)

OTHER FEATURES:

- * TO CHECK THE ALARM SOUND BY KEEP ON PRESSING THE "TALKING BUTTON" OVER 3 SECONDS. THE ALARM SOUND WILL BE DEMONSTRATED.
- * HOUR ANNOUNCE: SHIFT "HR ANNOUNCE" SWITCH TO "ON" POSITION, THE TIME WILL BE ANNOUNCED BY HOUR AUTOMATICALLY. SHIFT THE SWITCH TO "OFF" POSITION TO DELETE THIS FUNCTION.
- * RESET: PRESS THE "RESET" KEY BY USING THE TIP OF A PEN, THE VOICE TIME WILL START AGAIN FROM "IT'S TWELVE O'CLOCK AM"

ATTENTION:

IF THE SOUND BECOMES WEAK OR THE FUNCTION IS ABNORMAL, PLEASE CHANGE THE BATTERIES WITH NEW ONES.