



Large Print Instructions Analog Talking Watches

Keys:	TL = Top Left button	(Near the "10")
	BL = Bottom Left button	(Near the "8")
	TR = Top Right button	(Near the "2")
	BR = Bottom Right button	(Near the "4")

Setting Analog Time:

- 1) Remove the protective plastic tab by gently pull out the stem.
- 2) With the stem pulled out, turn it to adjust the hour and minute hands to the desired time.
- 3) Lock in this time by pushing in the stem. The analog time will NOT advance if the stem is not pushed back in. DO NOT turn the stem unless it's pulled out as this will damage the watch.

Setting Talking Time:

- 1) Press the TL button (Mode). "Set time" is announced.
- 2) Next, press the BL button, to adjust to the hour. AM and PM will be announced.
- 3) To set the minutes, press the BR button.
- 4) Once done, do not press any buttons, waiting several seconds, until the watch "beeps." This indicates the talking time has been set.

Setting Alarm Time:

- 1) Press the TL button (Mode) twice. "Set Alarm Time" is announced.
- 2) Next, press the BL button, to adjust the alarm hour. AM and PM will be announced.
- 3) To set the alarm minutes, press the BR button.
- 4) To confirm alarm time, press the TR button. It will announce the alarm time.
- 5) Once done, do not press any buttons, waiting several seconds, until the watch "beeps." This indicates that the talking alarm time has been set.



The catalog of products for the
visually impaired and hard of hearing

800-468-4789 Toll Free

Confirm Alarm is Turned On / Activated:

- 1) Press the TL button (Mode) three times. "Time" is announced.
- 2) Press the BL button, to choose the alarm time desired. Once you select the alarm sound, the alarm will be turned on, for the alarm time set above.

To Turn Off the Talking Alarm:

- 1) Press the TL button (Mode) three times. "Time" is announced.
- 2) Press the BL button several times, passing by the alarm sounds, until the watch announces "Alarm off."

To Set the Hourly Announcement:

This feature allows the watch to automatically announce when each hour changes.

- 1) To activate hourly announcement, press the BR button until "Chime On" is announced.
- 2) To turn OFF hourly announcement, press BR button until "Chime Off" is announced.

BATTERIES:

- NOTE: Only a professional, qualified jeweler should change these batteries. Jeweler tools, and expertise, are required to service these watches and to ensure batteries are correctly changed and properly repositioned, so the watch will operate after being serviced.
- *Battery life is NOT warranted by LS&S.*
- These watches require two batteries:
 - One for the talking voice (CR2016) and
 - Another for the analog hands (SR626SW).